



KRIEGHOFF

INSTRUCTION MANUAL SEMPRIO

In-Line Repeater



Dear Customer, thank you for your trust in Krieghoff.

Through family traditions, values and identity are created. Since 1886, the Krieghoff family has produced exceptional firearms. We are proud of this tradition, which has proved its worth for generations.

It is the personal experience and intense dialogue with hunters around the world that drives the dynamic innovations and ongoing enhancements of our outstanding hunting weapons.

Our family history is a tradition full of achievement that we are proud of. With the acquisition of one of our firearms, you are now experiencing the results of our traditions and values. We hope you enjoy it.


Dieter Krieghoff


Phil Krieghoff

KRIEGHOFF SEMPRIO IN-LINE REPEATER

Handling and Service Instructions for the Krieghoff Semprio In-Line Repeater.

CAUTION

Read and understand all instructions before using this or any other firearm. Read, learn, and observe the safety procedures described on page 5. Always point a firearm in a safe direction so that it does not endanger anyone, including yourself. Bullets may range as far as five miles. Do not discharge a gun towards any hard surface, including water, because bullets can ricochet in unpredictable directions. Be certain that anyone you allow to use your firearm understands all of the safety rules and is familiar with the weapon before taking possession of the firearm or shooting it.

ALWAYS TREAT EVERY FIREARM AS IF IT IS LOADED AND READY TO FIRE! NEVER POINT A FIREARM AT ANY PERSON! NEVER POINT A FIREARM AT ANY OBJECT YOU DO NOT INTEND TO SHOOT!

FIREARM SAFETY IS ALWAYS THE RESPONSIBILITY OF THE SHOOTER!

CONTENTS

I. Gun safety rules	5	VI. Krieghoff Universal trigger system	
II. Take Down		Set trigger function	23
Assembly	9	Set trigger regulation	24
Disassembly	10	VII. Shooting and repeating	25
„Click-and-Go“ - Sling swivel	12	VIII. Caliber change	
III. Loading and unloading		Barrel change	27
Loading and inserting the magazine	13	Changing the locking bolt head	28
4+1-Magazine capacity	14	IX. Adjusting the open sight	30
Unloading	16	X. FAQ	
IV. Krieghoff combi-cocking device		Maintenance	31
Cocking and uncocking	18	Troubleshooting	31
Opening the action	20	XI. Data Sheet	33
V. „Safe-to-Carry“-Position	21		

I. GUN SAFETY RULES

**VERY IMPORTANT:
ANYONE WHO HANDLES THIS FIREARM
MUST READ AND FOLLOW THESE
INSTRUCTIONS BEFORE USING THIS
FIREARM. FIREARM SAFETY IS THE USER'S
RESPONSIBILITY! THINK GUN SAFETY!**

GENERAL SAFETY CAUTIONS FOR THE USE OF FIREARMS:

- Before using a firearm be sure that you fully understand how to handle and operate a firearm. Read and follow the instructions shown in this manual before using your firearm.
- Always point the muzzle in a safe direction, away from yourself and others.

- Never point your firearm at a person or yourself or anything you do not intend to shoot at.

- If you pass a firearm to another person completely unload the weapon and lock open the action.

- Never rely on any mechanical device as a safety.

- Keep your finger off the trigger and outside the trigger guard until you are ready to shoot.

- Keep the action open and the gun unloaded until you are ready to use it.

- Always handle a firearm as if it were loaded and ready to fire.

- Before loading a firearm make sure the barrel is clear of obstructions (for example water, soil, branches, jammed bullets).

- Before firing always check the target and the backstop and make sure that there is no danger for people or property.

- Always keep in mind that bullets can travel up to five miles and can cause serious injury, death or damage to property.

I. GUN SAFETY RULES

- Never shoot a rifle straight up in the air or at a high angle of elevation.
- Never touch the trigger of a loaded firearm until you are aiming at the target.
- Think before shooting. Once you pull the trigger, you can not take back the bullet.
- Shooting a firearm is a serious sport. There is no room for joking around or horseplay when handling a firearm.
- Do not use drugs or alcohol when shooting and do not shoot if you are tired or impaired in any way.
- Do not use any ammunition other than original high quality commercially manufactured ammunition in good condition.
- The use of improperly reloaded cartridges can cause damage to the firearm and also injury, death or damage to property.
- Use only ammunition that is identical with the caliber of your firearm. Never use ammunition which exceeds industry standard pressure specifications.
- Carry only one caliber of ammunition when shooting to avoid grabbing the wrong ammunition by mistake.
- Dispose of unwanted ammunition safely.
- Make sure that nobody is in the ejection area. Ejected shells can cause serious injury.
- Always avoid ricochets. Never shoot at a hard surface such as rock, or a liquid surface such as water.
- Never carry a rifle with a round in the chamber or loaded in any fashion.
- Never enter or leave a vehicle with a loaded firearm. Also never climb a treestand and never climb over obstacles (fences, trees, creeks, hedges etc.) with a loaded firearm.

I. GUN SAFETY RULES

- Make sure your firearm is in top mechanical condition before firing it. Check your firearm over for any visible signs of wear or mechanical problems. Have a gunsmith or other qualified firearms expert check your gun over periodically for mechanical problems.
 - Never use a firearm if it fails to function properly. Never force a jammed action as a round may explode causing serious injury, possibly death, or severe damage to your firearm.
 - Do not modify this firearm in any way
 - Always unload a firearm before laying it down, traveling or storing. Also make sure your firearm is not loaded and open the action.
 - You are responsible for making sure the firearm is under your positive control at all times and not accessible by other parties, especially children.
 - Lock your firearm at all times when not in use to prevent unauthorized or untrained persons from having access to your firearm.
 - Always keep and store the firearm and ammunition in separate locked receptacles out of reach of children and other persons.
 - Important – Firearms must be unloaded before cleaning.
 - If you sell your firearm make sure that all documents including the owner's manual will be handed over to the recipient of the firearm.
 - Always wear ear protection and protective shooting glasses when shooting.
- IF YOU DO NOT FOLLOW THE INSTRUCTIONS AND SAFETY WARNINGS SHOWN ABOVE, THE USE OR HANDLING OF YOUR FIREARM CAN CAUSE SERIOUS INJURY, DEATH, OR DAMAGE TO PROPERTY.

Link to the Video-Tutorial:



krieghoff.de/semprio-tutorial



II. TAKE DOWN

1. ASSEMBLY

Make sure that the locking slide on the left side of the action is pushed towards the muzzle (Fig. 1).



Fig. 1

To assemble the Semprio, the barrel unit is placed on to the system. Prior to assembly, tilt the cocking device right into the "service position" and push in, to ensure that the lock head is unlocked (Fig. 2) and fully extended.



Fig. 2

Now bring the bolt head and the guide rod into line with the two corresponding holes in the front part (Fig. 3). The front part is pushed without force on the lock carrier and the guide rod until the weapon is completely closed and locked. This way, the two units are connected safely.



Fig. 3

II. TAKE DOWN

Finally, the cocking device has to be turned left into the "neutral position" again (Fig. 4).

2. DISASSEMBLY
The Semprio can be disassembled in a few easy steps to a small pack size.

Open the system by turning the cocking device from the neutral position (Fig. 4) to the right, into the service position (Fig. 5). Then push it forward (Fig. 6).



Fig. 4



Fig. 5



Fig. 6

II. TAKE DOWN

While pushing the cocking device forward, pull the barrel assembly all the way to the front (Fig.7).
Make sure to pull the barrel assembly by holding on to the forend and not the barrel itself.

Pull the release lever on the magazine box backwards (Fig. 8).

Slide the barrel assembly further forward until it completely separates from the frame portion of the rifle (Fig. 9).



Fig. 7



Fig. 8



Fig. 9

II. TAKE DOWN

3. "CLICK-AND-GO" SLING SWIVEL

The "Click-and-Go" sling swivel comes standard on the Semprio In-Line Repeater and is designed with a quick detach button for easy attachment and detachment.

To attach, simply push in the quick detach button and insert the swivel into the swivel socket (Fig. 10 and 11). To detach, simply push in the button and pull the swivel out of the socket while keeping the button pushed in.

For different sling position and use; for example for driven hunts, the swivels can be turned by 90 degrees so that the open loop stays parallel with the barrel.



Fig. 10



Fig. 11

III. LOADING AND UNLOADING

1. LOADING AND INSERTING THE MAGAZINE

Attention! Read and follow the safety instructions before loading the firearm!

To use the magazine, open the gun and insert the magazine in the magazine slot until you hear it click into place (Fig. 12 + 13).

Slight variations in height and to the sides in a locked position are normal.

To remove the magazine, open the gun completely and pull the magazine locking lever located centrally at the front edge of the magazine in the forend towards you (Fig. 14). Now the magazine is unlocked and can be removed.



Fig. 12



Fig. 13



Fig. 14

III. LOADING AND UNLOADING

2. 4+1 MAGAZINE CAPACITY

For magnum caliber, the expanded magazine capacity of 4 + 1 does not apply. Weapons in these calibres can be loaded with 3 + 1. The procedure remains the same.

The caliber .223 allows for a maximum of 4 cartridges are loaded via the magazine only. No additional cartridge can be loaded directly into the chamber.

Follow these steps to load your weapon with an extra cartridge directly into the chamber:

- Load the magazine with the maximum number of cartridges.
- Now close the weapon up to the 4 + 1 marker (Fig. 15).



Fig. 15

- The locking slide on the left side of the action is pulled back while you continue to slowly close the weapon, until the slider clicks into place (Fig. 16).



Fig. 16

III. LOADING AND UNLOADING

- Insert the loaded magazine (Fig. 17). Push the magazine all the way up into the magazine slot until it clicks into place. The locking bolt head is now above the uppermost cartridge.



Fig. 17

- Load an extra cartridge into the chamber (Fig. 18).
- Unlock the locking slide again and close the weapon.



Fig. 18

- Check the cocking device position, to make sure that the gun is not cocked.

III. LOADING AND UNLOADING

3. UNLOADING

When the action of the gun is closed, a safety interlock prevents the action from opening only by pulling the forend. The action must therefore be opened manually to unload/open the gun.

To do this, swing the cocking device from the neutral position to the right into the service position.

Push the cocking device forward (Fig. 19) and at the same time pull the barrel assembly forward by holding on to the forend. After firing a shot, the shooter unlocks the bolt head by pulling the forend forward (spring-free travel in the forend). When the forend is pulled out beyond this "play" distance, the bolt head releases and the action opens.

The cartridge drawn out of the cartridge chamber is dropped into the palm of the hand held below the ejector window (Fig. 20).



Fig. 19



Fig. 20

III. LOADING AND UNLOADING

To remove the magazine, pull the magazine release lever (Fig. 21), which is centered on the front edge of the magazine in the forend. Now the magazine is unlocked and can be removed (Fig. 22).



Fig. 21



Fig. 22

IV. KRIEGHOFF COMBI-COCKING DEVICE

1. COCKING AND UNCOCKING

Attention! Only cock the rifle when you are ready to shoot! Always point the rifle in a safe direction away from others and yourself to avoid serious injury or death. Never point the rifle at anything you do not intend to shoot or any hard surfaces such as rocks, concrete or water. Bullets can ricochet and cause serious injury or death.

The Semprio does not have a conventional safety. The Semprio's cocking device instead acts as the safety. You carry the rifle completely uncocked and manually cock it just prior to firing. The rifle is immediately ready to fire once the cocking device is in its cocked, firing position.

The cocking device is uncocked and in a safe position when moved to the rear position, where it protrudes approximately 1/2" behind the top tang (Fig. 23).



Fig. 23

The cocking device controls all functions of the action mechanism with the exception of actual pulling of the trigger. To cock the rifle in preparation for immediate firing, push the cocking device all the way forward, until it engages with a slight "click" (Fig. 24).



Fig. 24

IV. KRIEGHOFF COMBI-COCKING DEVICE

With the cocking device in the forward position and fully engaged, the rifle is ready to be fired (Fig. 25). The cocking device remains in the forward cocked position throughout the repeating firing sequence, until manually moved to the rear, uncocked position.



Fig. 25

To uncock the rifle, push forward on the lower part of the cocking device as shown in Figure 26. Release pressure, allowing the cocking device to slide to the rear, uncocked position.



Fig. 26

The striker is now disengaged, and in a safe position. In this position there is no possibility of an accidental discharge. The cocking device is shown in the uncocked rear position. The rifle is now uncocked and absolutely safe (Fig. 27).



Fig. 27

IV. KRIEGHOFF COMBI-COCKING DEVICE

2. OPENING THE ACTION

To open the system - for example, to unload the weapon or disassemble it - the system must be opened manually.

Open the action by moving the cocking device from the neutral position to the right, into the service position and holding it forward (Fig. 28). With the cocking device pushed in, pull the barrel forward (Fig. 29).

When the gun is closed again, the cocking slide can be returned to neutral again (Fig. 30).



Fig. 28



Fig. 29



Fig. 30

V. "SAFE-TO-CARRY" POSITION

ATTENTION! WHEN IN HUNTING PARTIES OF MORE THAN ONE PERSON, YOU SHOULD ALWAYS UNLOAD AND CARRY THE SEMPRIO IN THE "SAFE-TO-CARRY" POSITION UNTIL YOU ARE ACTUALLY READY TO TAKE A SHOT.

The „Safe-to-Carry“ position of the Semprio makes it possible to carry the weapon with the cap slightly open. This clearly signals to everyone in your hunting party that the rifle is unloaded.

Although the action is slightly open the "Safe-to-Carry" design minimizes the chance of dirt penetrating the action.

After completely unloading the rifle, close the action until the rear end of the action frame lines up with the engraved rear marker on the cannellured bolt head carrier, as shown in Fig. 31.

The locking slide on the left side of the action frame is pulled back and thereby the barrel continued to be pushed back until the slider clicks into place (Fig. 32).



Fig. 31

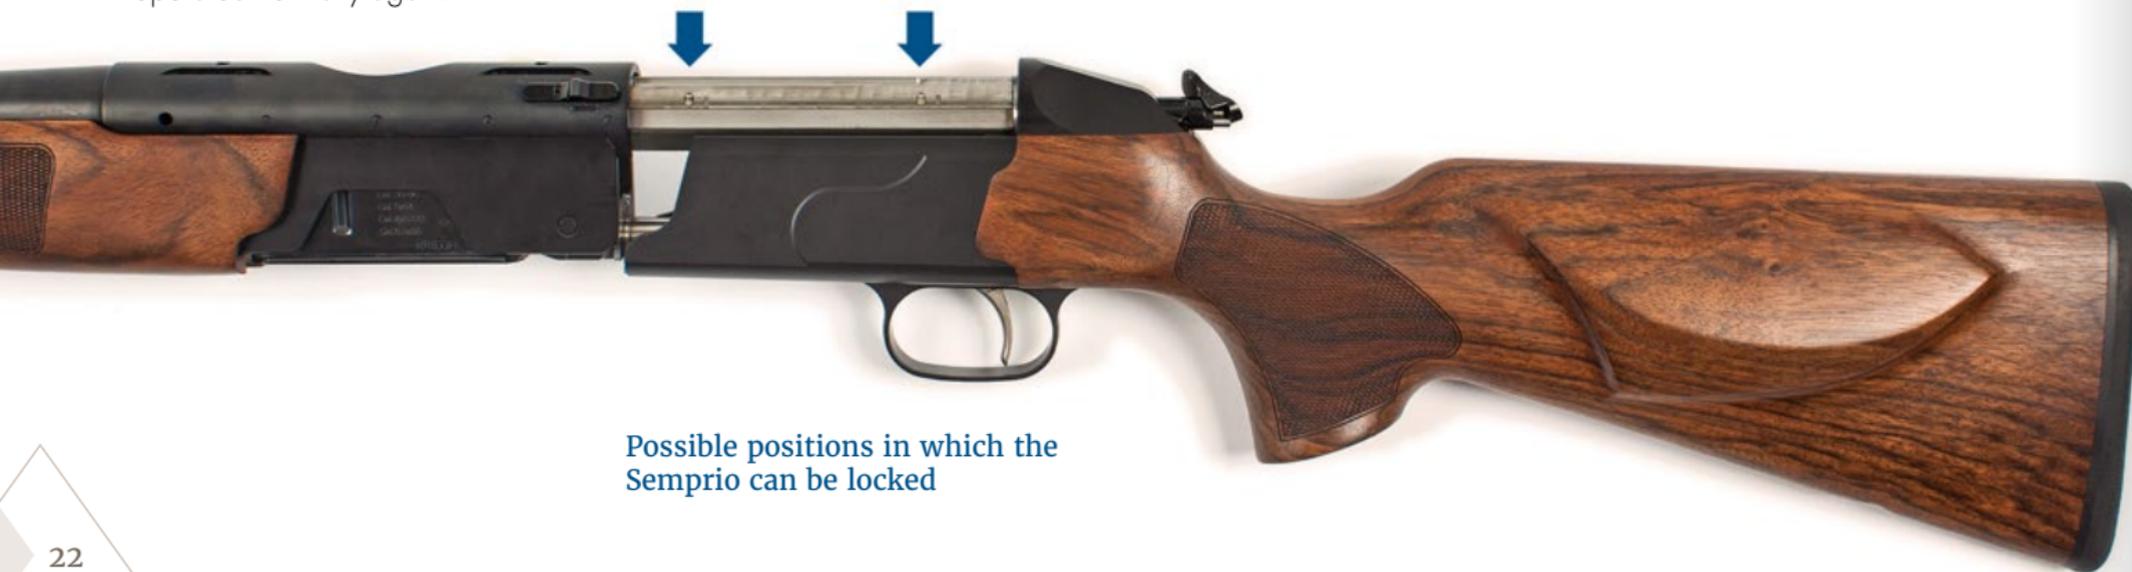


Fig. 32

V. "SAFE-TO-CARRY" POSITION

The action is now fixed in a recognizable open position. To unlock the gun, the locking slide simply need to be pushed into forward position. The in Line repeating system can now be operated normally again.

Both, in the 4 + 1 position and the safe-to-carry position, the Semprio is secured and save.



Possible positions in which the Semprio can be locked

VI. KRIEGHOFF UNIVERSAL TRIGGER SYSTEM

1. SET TRIGGER FUNCTION

Warning! Make sure that the set trigger is not set prior to loading the firearm. Never engage the set trigger unless you are immediately ready to fire the rifle!

Use the set trigger feature only under very controlled circumstances such as shooting from a rest.



Fig. 33

The Krieghoff Universal Trigger System provides a clean, crisp trigger pull of approximately 1,250 grams (just under 3 lbs.) and an adjustable set trigger for controlled shooting from a rest.

Engage the set trigger only when intending to use it for an immediate shot by pushing the trigger with your thumb forward until the trigger engages and stays in forward position (Fig. 33).



Fig. 34

If the opportunity to shoot passes, unset the set trigger immediately. First, hold the rifle in a safe direction and uncock the rifle, operating the cocking device as previously described (Fig. 34). Gently support the trigger between the thumb and trigger finger to disengage the set trigger (Fig. 35).



Fig. 35

VI. KRIEGHOFF UNIVERSAL TRIGGER SYSTEM

2. SET TRIGGER REGULATION

Pull the trigger back slightly until the set position noticeably disengages with a "click". The set trigger operation should be practiced repeatedly with an unloaded rifle until you are confident with the procedure.

WARNING! A set trigger will go off at the slightest touch! Use the set trigger feature only under optimal and controlled conditions and only when shooting from a rest! Always point the rifle in a safe direction, away from yourself and others. The rifle must always be unloaded, uncocked and the set trigger not set when making any set trigger adjustments.

The set trigger travel and pull can be adjusted by using a small Allen wrench to turn the set trigger adjustment screw located in the trigger area of the gun.



Fig. 36

- To shorten the trigger pull and shorten the travel of the set trigger, turn the small adjustment screw slightly clockwise. Use a 1.5 mm allen key for that.
- To increase set trigger pull and travel: turn the small adjustment screw slightly counterclockwise. It is important that the adjustment screw remains tight. If the screw turns too easy, it need to be secured in place with some Loctite.

We recommend only a qualified gunsmith perform any and all set trigger adjustments.

VII. SHOOTING AND REPEATING

ATTENTION! HOLD THE WEAPON IN A SAFE AND SECURE WAY PRIOR TO FIRING. PAY ATTENTION TO A SUFFICIENT BULLET CATCH.

The weapon is ready to fire by sliding the cocking device from the rear position forward to the front „cocked“ position (Fig. 37).



Fig. 37

Pulling the trigger will discharge the rifle. (Fig. 38).

After firing, the Semprio is unlocked and subsequently released by pulling forward on the forearm (Fig. 39). For repeating, simply push the front end of the semprio as far until it stops. Make sure to use the forend as the grip for your repeating hand.



Fig. 38

The empty cartridge is pulled out during forward movement and ejected through the ejector window (Fig. 40).



Fig. 39

VII. SHOOTING AND REPEATING

After the rifle is in open position, the repeating sequence is completed by pulling the barrel assembly back towards you until the closed position is reached.



Fig. 40



Fig. 41



Fig. 42

This movement (Fig. 41 and 42) will recock the lock mechanism and will also load a new round into the chamber (if there was an additional cartridge in the magazine).
The gun is now ready to be fired again.

VIII. CALIBER CHANGE

1. BARREL CHANGE

To change the caliber of the Semprio, the barrel assembly can be switched within a few simple steps. Depending on the caliber, the magazine and the locking bolt head must be changed as well.



VIII. CALIBER CHANGE

2. CHANGING THE LOCKING BOLT HEAD

Attention! Depending on the caliber, the replacement of the bolt head and possibly of the magazine is required in addition to the barrel change.



Fig. 43

First, disassemble the rifle into its main components. Then, slide the locking bolt head to the side and off the holding post (Fig. 43). You will feel slight resistance before the locking bolt head comes free. Finally, completely remove the locking bolt head from the rifle (Fig. 44).



Fig. 44

Reattach the new locking bolt head upon the locking bolt head post in reverse order as shown (Fig. 45).

The locking bolt head clicks firmly into place when inserted correctly.



Fig. 45

VIII. CALIBER CHANGE

Each locking bolt head is clearly marked with one or more stars (*) for the caliber group it is intended for. Before inserting the locking bolt head, check to make sure it is marked for the caliber group you intend to use.

- * **Caliber Group 5** (.223 Rem)
- ** **Caliber Group 1** (7x64, .30-06, 8x57IS, 6.5x55 SE, .270 Win.)
Caliber Group 2 (.243 Win., .308 Win.)
Caliber Group 3 (9.3x62)
- *** **Caliber Group 4** (.300 Win. Mag., 7mm Rem. Mag.)



IX. ADJUSTING THE OPEN SIGHT

The open sights can be easily adjusted with the help of an 1.5 mm Allen wrench.

The horizontal correction of the point of impact is done at the rear sight. To do this, first loosen the Allen screw (Fig. 46).

- If the rifle shoots to the left, the rear sight need to be adjusted to the right.
- If the rifle shoots to the right, the rear sight need to be adjusted to the left.

Tighten the allen screw after every adjustment of the sight. The vertical adjustment of the point of impact is adjusted directly at the front bead, by using a 1.5 mm allen key.

The vertical adjustment of the point of impact is adjusted directly at the front bead, by using a 1.5mm allen key. (Fig. 47).

- If the gun shoots high, turn the allen screw at the front bead clockwise. This will raise the front bead.
- If the gun shoots low, turn the allen screw counterclockwise. This will lower the front bead.

An adjustment of one click, moves point of impact approximately 1.5 cm at a target distance of 50 m.



Fig. 46



Fig. 47

X. FAQ

When the rifle is closed, the forearm can be pulled to the front about 5 mm against a spring. When released, it slides back to the original position. This “play” is normal and is required to unlock the action after a shot is fired.

After firing a shot or dry firing the rifle, it will open about 5mm automatically. This is absolute normal. In this position the locking head still remains 100% locked.

When firing the rifle, be sure to keep your hand on the checkered part of the forearm barrel assembly to avoid injuring your hand during the in - line repeating movement.

1. MAINTENANCE

In addition to routine gun cleaning and maintenance, the following should be observed: To maintain optimal operation of the in-line action mechanism, the inside of the action frame (Fig. 48) should be lubricated slightly with some gun grease such as Krieghoff Gun glide.

The guide rod should always be lightly oiled. Do not use grease in this area!



Fig. 48

2. TROUBLESHOOTING

Barrel and action do not fit together

- The locking bolt head is in the locked position.
- The locking bolt head is not properly inserted and not fully seated in position.
- Safe to carry slide is in rear position.

Action is completely open and cannot be closed

- “Safe to Carry” position is engaged.
- Interference from an object or dirt.

Rifle cannot be closed completely

- Magazine is not completely seated in the magazine compartment.
- Interference from an object or dirt.

X. FAQ

Unable to lock rifle

- Wrong ammunition loaded.
- Wrong locking bolt head installed.
- Dirt in the rotation area of the locking bolt head and corresponding chamber area.

Impossible to cock rifle

The cocking device is in service position instead of the operating position required for cocking.

Cannot set the set trigger

Set trigger pull needs to be increased and adjusted heavier.

= Rifle must be checked at the Krieghoff factory or by a skilled gunsmith.

Rifle jams during rapid firing sequence

Action was not fully opened to the stop position: which prevented the spent cartridge from being ejected and new cartridge from being chambered.

= Uncock and open the rifle, remove the magazine and carefully remove the jammed cartridges.

Rifle fails to fire when trigger is pulled

- Rifle was not cocked before firing.
- Rifle was not completely closed.
- Faulty ammunition caused misfire.

Empty cartridge does not eject when action is opened

- Ejector claw is damaged.
- Check barrel chamber for rust or debris.

Rifle uncocks when closed fast

= Rifle must be checked at the Krieghoff factory or by a skilled gunsmith.

After firing, rifle is hard to open or will not open at all

- Cocking device does not operate properly. Try to uncock the rifle by using the cocking device as instructed with the help of the service position.
- If rifle fails to open by operating the cocking device, this indicates the last round fired through the rifle caused extremely high pressure and possibly damaged the rifle.

X. FAQ

"Click-and-Go" swivel doesn't engage correctly into the lock bushing

- Leather straps too thick
- Button is pressed permanently
- Eye position not horizontal or parallel to the weapon
- Dirt in the locking bush

XI. DATA SHEET

Model: Krieghoff Semprio In-Line-Repeater

Serial number locking bolt head: _____

Serial number barrel: _____

Caliber: _____

Barrel length: _____

Ammunition used for sighting in: _____

Date of purchase: _____

NOTES



H. KRIEGHOFF GMBH

HUNTING AND SPORTING ARMS
BOSCHSTRASSE 22
89079 ULM
GERMANY

krieghoff.de